

MOUNTING INSTRUCTIONS FOR PANHARD KIT WITH 4-BAR SET-UP!

PETE JAKES

HOT ROD PARTS

401 Legend Lane, Peculiar, MO 64078
(816) 758-4504 Tech Line
(816) 758-4512 Fax
EMAIL: calkid@casstel.net

AFTER LOCATING POSITION,
TACK, THEN WELD!


BRACKET

PANHARD BAR

© Pete Jakes '09

1016-B

PANHARD BAR BRACKET MOUNTS
TO THE BATWING. USE THE 4-BAR
BOLTS WHEN ASSEMBLED!

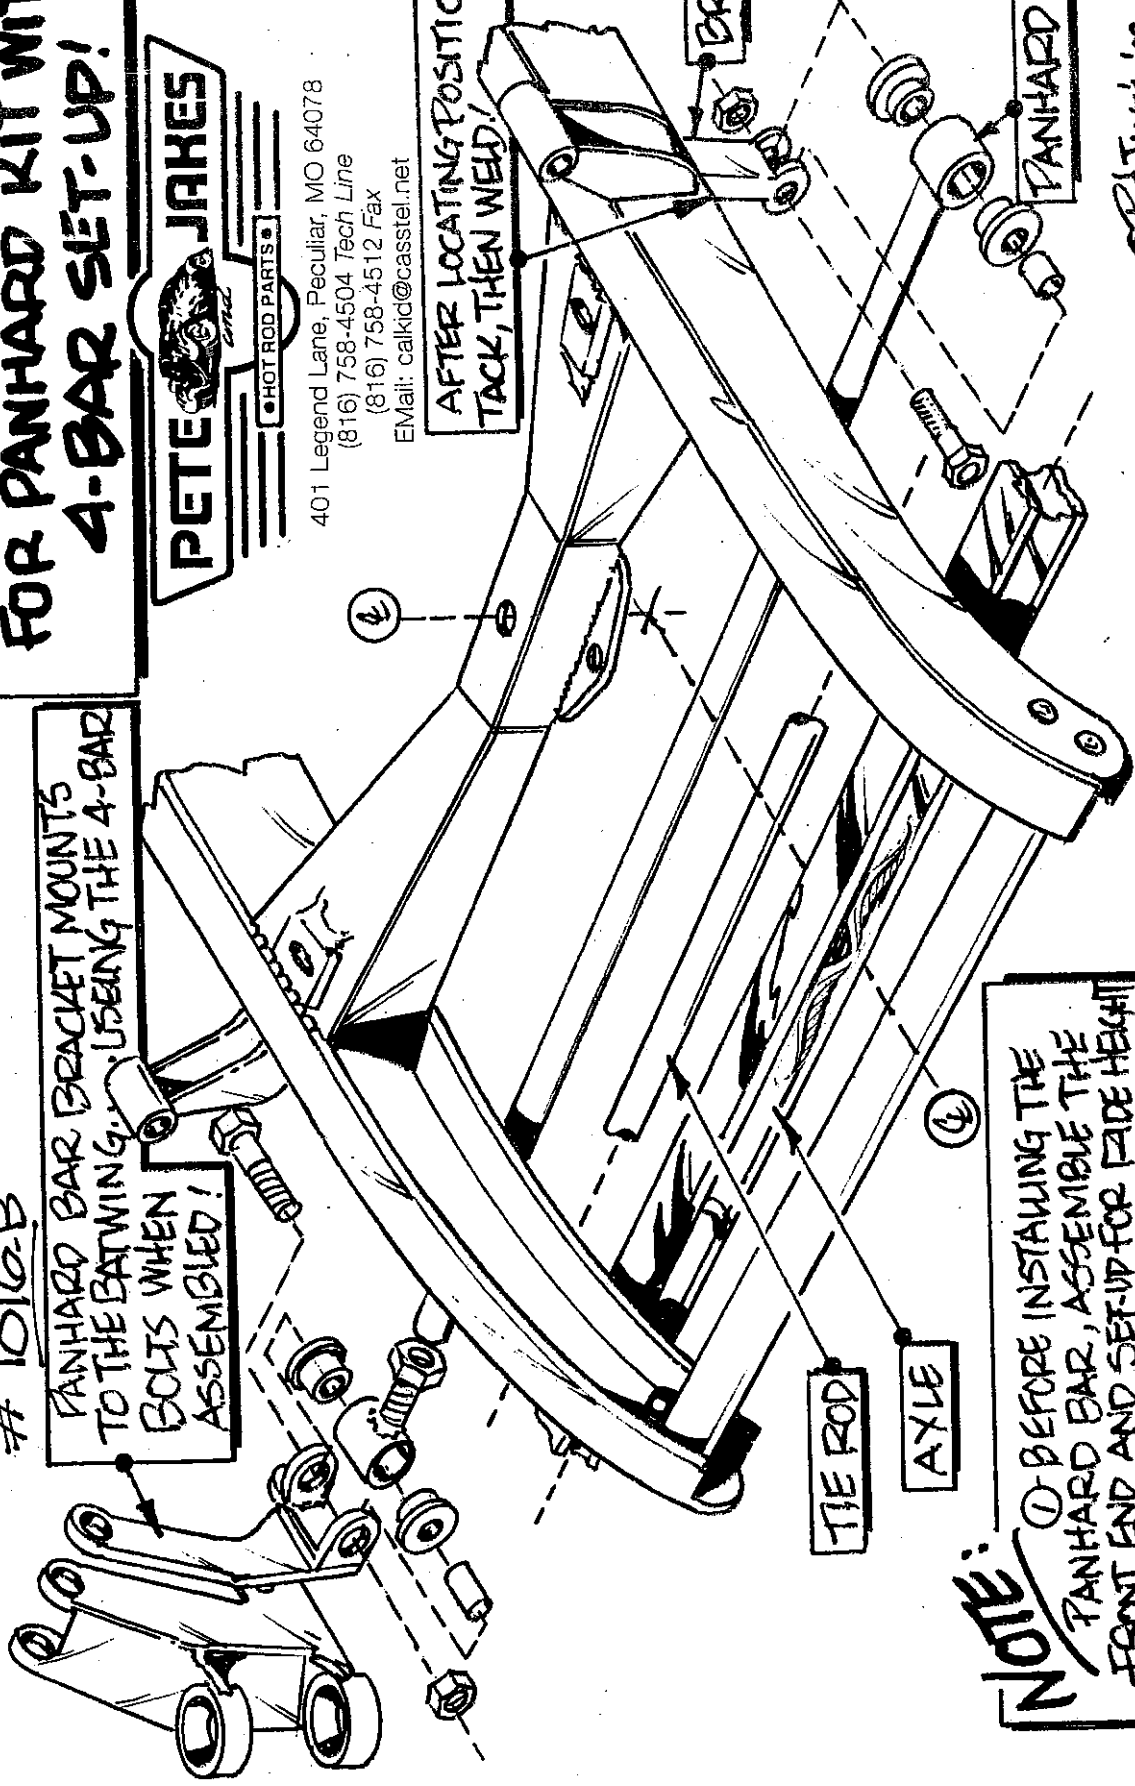

NOTE:

- 1 BEFORE INSTALING THE PANHARD BAR, ASSEMBLE THE FRONT END AND SET-UP FOR RIDE HEIGHT
- 2 ATTACH THE ADJUSTABLE ROD-END TO THE BATWING AS SHOWN.
- 3 ATTACH THE DRIVERS SIDE PANHARD BAR TO THE BRACKET, MEASURE OR SET TO PARALLEL TO THE TIE-ROD. 4 TACK BRACKET TO UNDER SIDE OF FRAME, CHECK AGAIN TO A PARALLEL DISTANCE TO THE TIE-ROD.
- 5 MAKE A "SNUG-UP" ADJUSTMENT ON THE BATWING SIDE. 6 ROD SHOULD HAVE NO BINDING, AND SHOULD BE CLEAR TO MOVE UP AND DOWN WITH FRONT-END RIDE.
- 7 MAKE FINAL WELD TO THE BRACKET ON FRAME!