



• HOT ROD PARTS •



MODEL A & 32 FORD

FRONT SHOCK MOUNTING KIT

1095

• THIS SHOCK KIT, AS SHOWN, IS DESIGNED FOR USE WITH A 4" DROPPED AXLE. A STOCK AXLE OR AN AXLE WITH LESS AMOUNT OF DROP MAY CAUSE THE SPINDLE STEERING ARM TO HIT THE SHOCK ABSORBER IN WHICH CASE LOWER BOLT-ON MOUNTS CAN BE ROTATED OR SWAPPED SIDE FOR SIDE TO PROVIDE CLEARANCE.

MODEL A

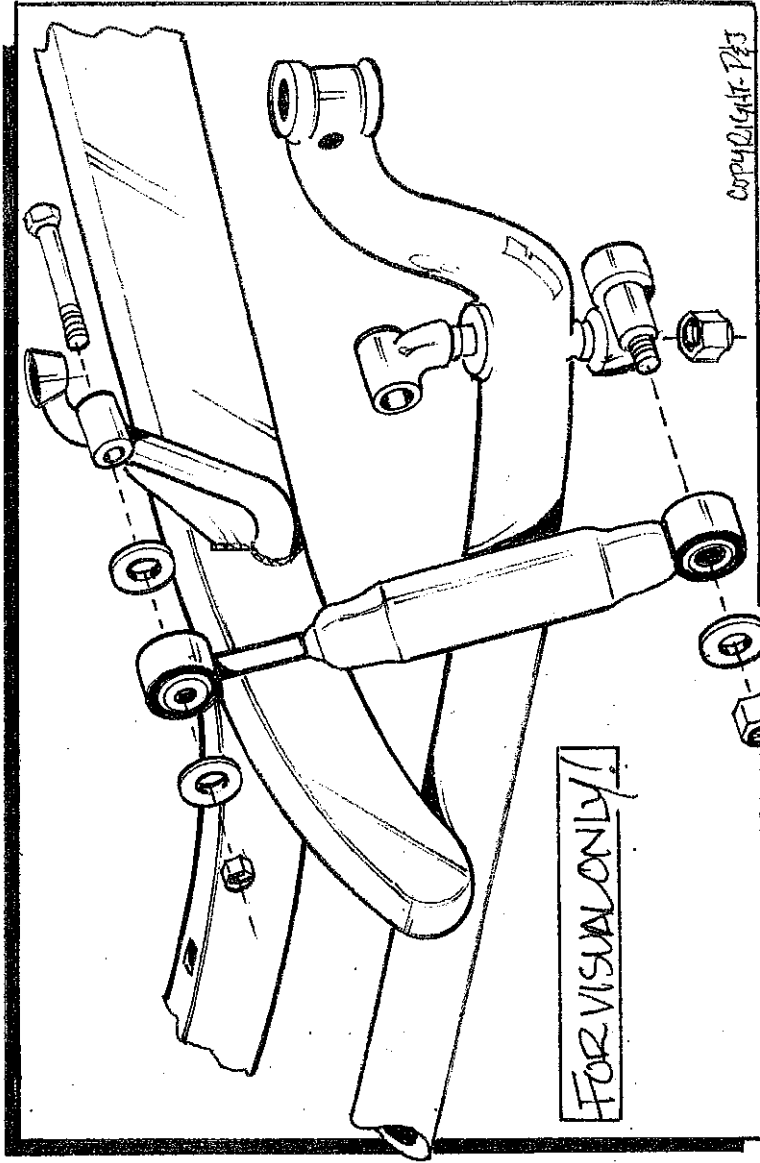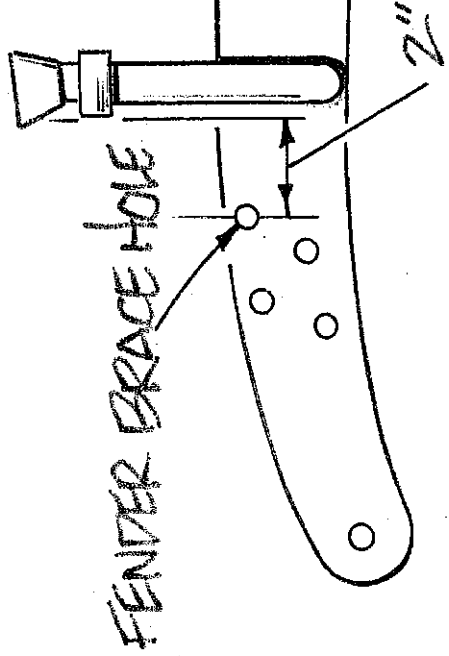

copy right 723

32 FORD

