

401 Legend Lane • Peculiar, MO 64078



Tech Line (816) 758-4504

800-334-7240

Fax (816) 758-4512


When assembling bars, lay one bar over the other and line up all 3 hook-up points with bolts.

32 FORD REAREND MOUNTING KIT

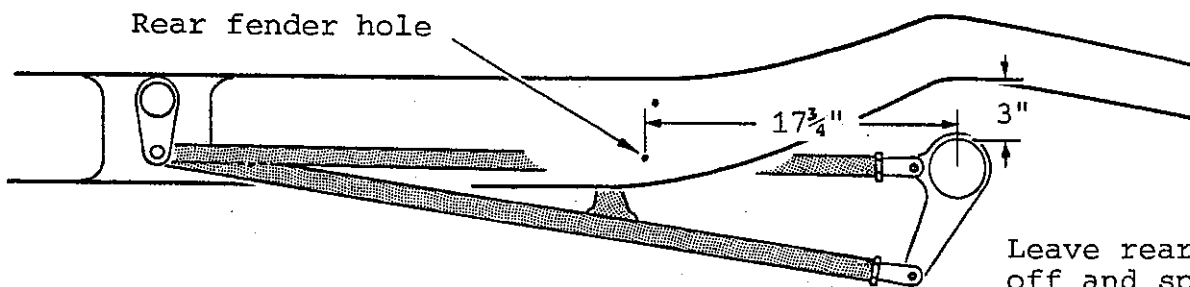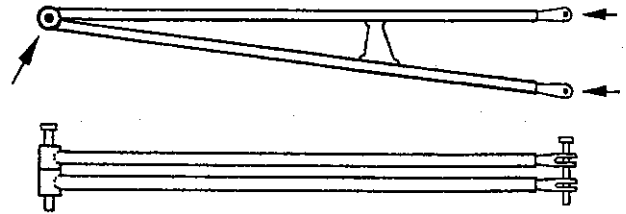

Center of rearend is 17 ³/₄" back from center of rear fender hole in side rail. Position rearend and work forward to locate tube crossmember and boxing plates.

Leave rear spring off and space rearend 3" down from frame rail.

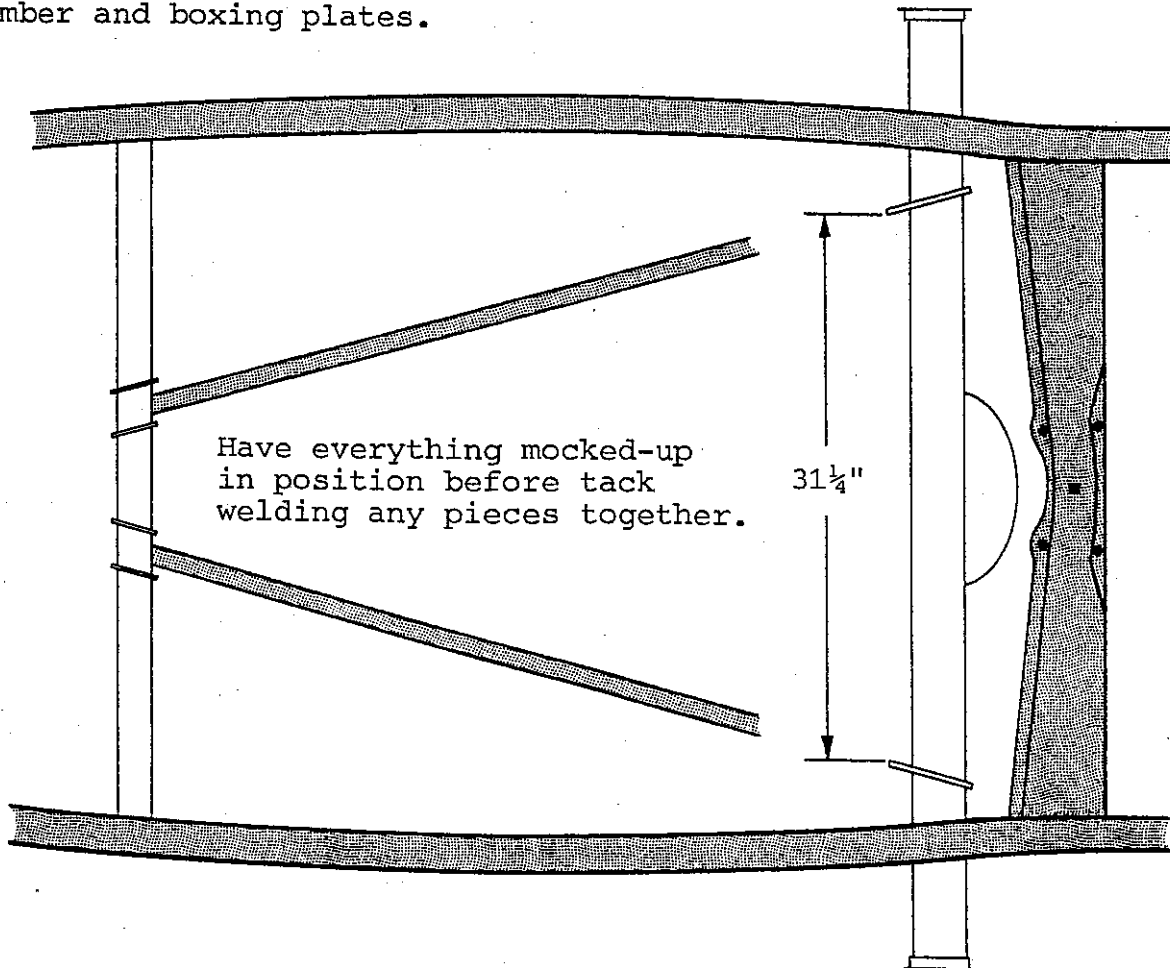

UPPER & LOWER