

Instructions for #4021

# '33-'34 FORD

VIPER HAIRPIN


Tech Line (816) 758-4504

800-334-72240

Fax (816) 758-4512

Measure from center of crossmember back  $37\frac{5}{8}$ " to locate vertical center of hole to be drilled. From that point, measure down through rail, then measure down  $5\frac{1}{8}$ " to locate horizontal center. Start hole with  $\frac{1}{8}$ " drill bit, being careful to keep pilot hole square with frame rail. then, with  $\frac{7}{8}$ " hole saw, bore completely through rail.

**SPECIAL NOTE:** Frame should be boxed the full length to prevent rails from flexing. If this is not possible, frame must be boxed at least 5" beyond either side of the point at which hole is to be drilled in frame rails.

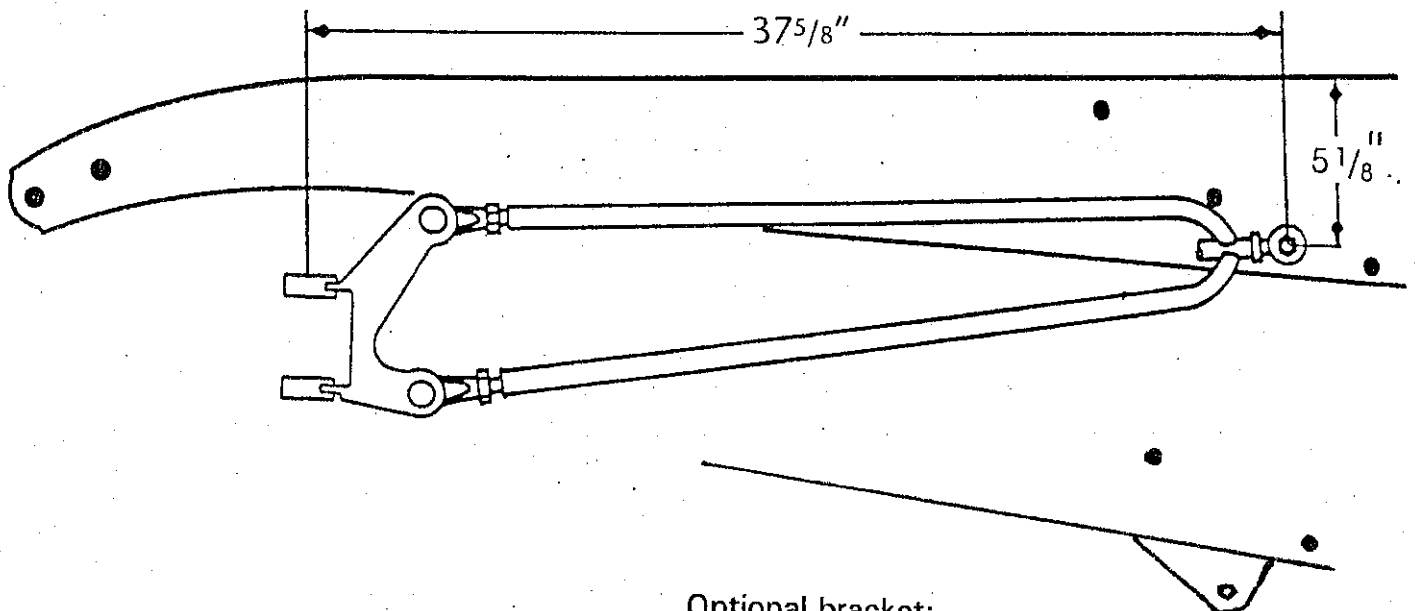

Optional bracket:  
For use for under rail mounted hairpin.



401 Legend Lane • Peculiar, MO 64078 • 1-800-334-7240