

#5010-HC

# INSTRUCTIONS FOR: '35-'40 BRAKE & CLUTCH INSTALLATION!

LINE-UP HOLES CUT IN TEMPLATE  
WITH STOCK HOLES IN X-MEMBER!  
1939-1940

MARK A LINE AROUND AREAS  
TO BE REMOVED!

CENTER PUNCH 2 NEW HOLES TO  
BE DRILLED OUT TO 5/16!"  
1935-1938

LINE-UP EDGE OF TEMPLATE PARALLEL  
WITH X-MEMBER CHANNEL!


LINE-UP HOLE IN TEMPLATE  
WITH STOCK HOLE IN X-MEMBER!

NEW HOLE OVERLAPS STOCK HOLE.  
MARK AREA TO BE REMOVED...  
... USE A SMALL ROUND FILE!


MARK A LINE AROUND AREAS  
TO BE REMOVED!

**NOTE:** MOUNTING TEMPLATE  
ON BACK OF INSTRUCTIONS!

DRIVERSIDE PAIR!

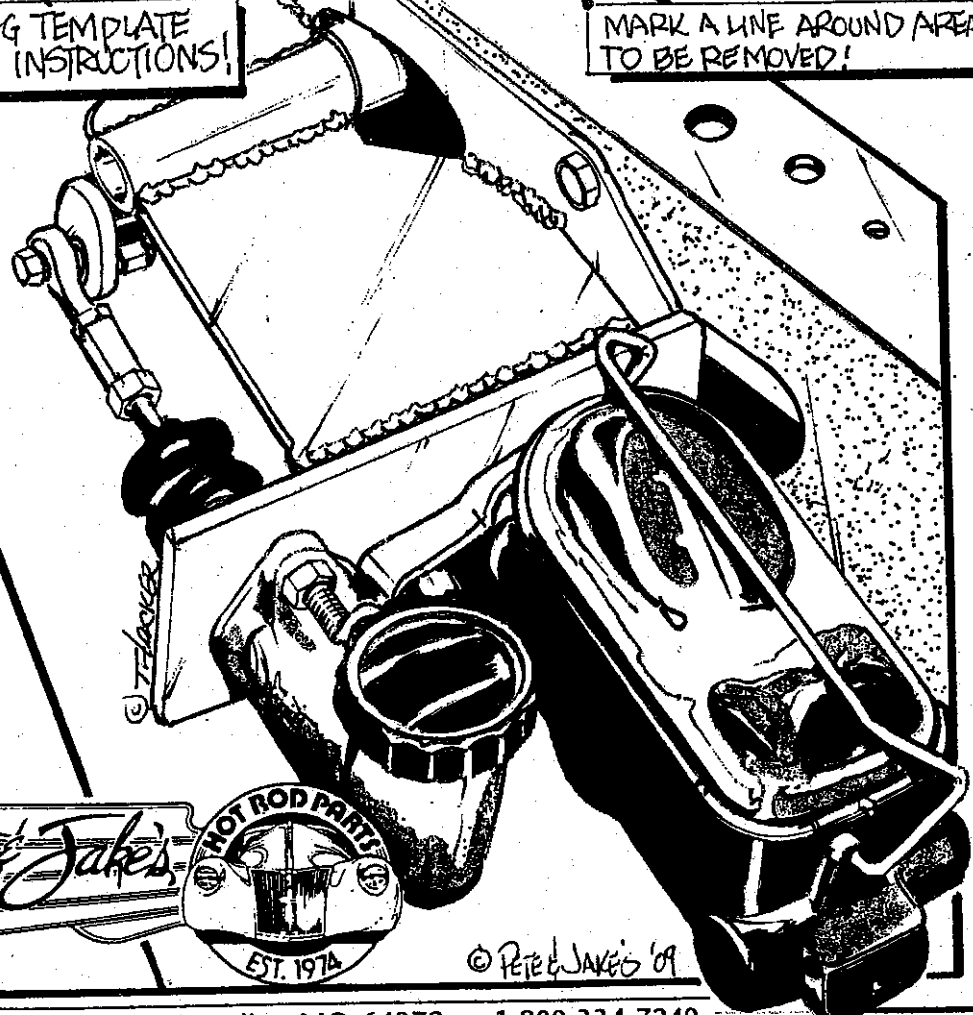

*Peter & Jake's*

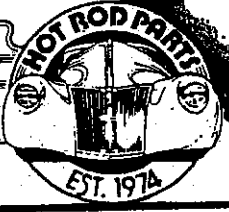

© Peter & Jake's '09