



$7/16-14 \times 2\frac{1}{4}$ — UPPER BOX + BRACKET BOLT
6000 Steering box mount
Instruction Sheet

2) $7/16-14 \times 1\frac{1}{2}$ BOTTOM BRACKET BOLTS

Step 1- Install all three frame bolts loosely

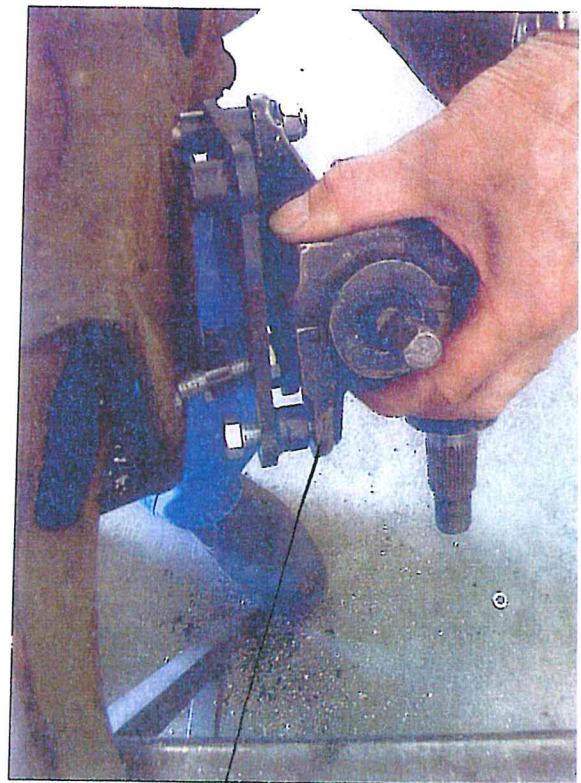

Step 2- Then install two lower box bolts loosely

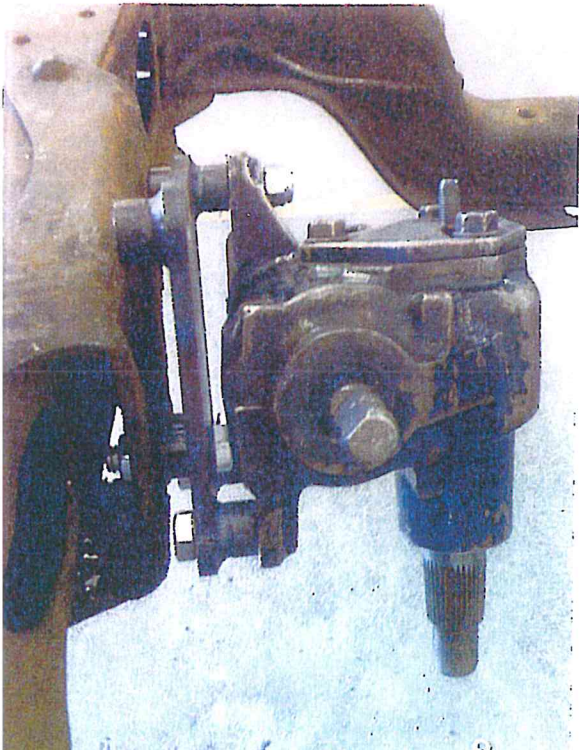

2) $7/16-14 \times 1\frac{1}{2}$
BOTTOM BOX BOLTS

Step 3- Then tighten all bolts