



LINE UP HOLES IN
TEMPLATE WITH STOCK
HOLES IN X-MEMBER

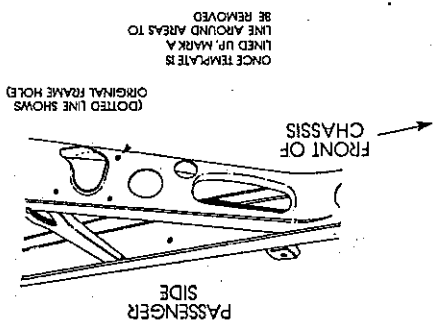


CAREFULLY CUT
ON SOLID LINES
WITH X-ACTO KNIFE

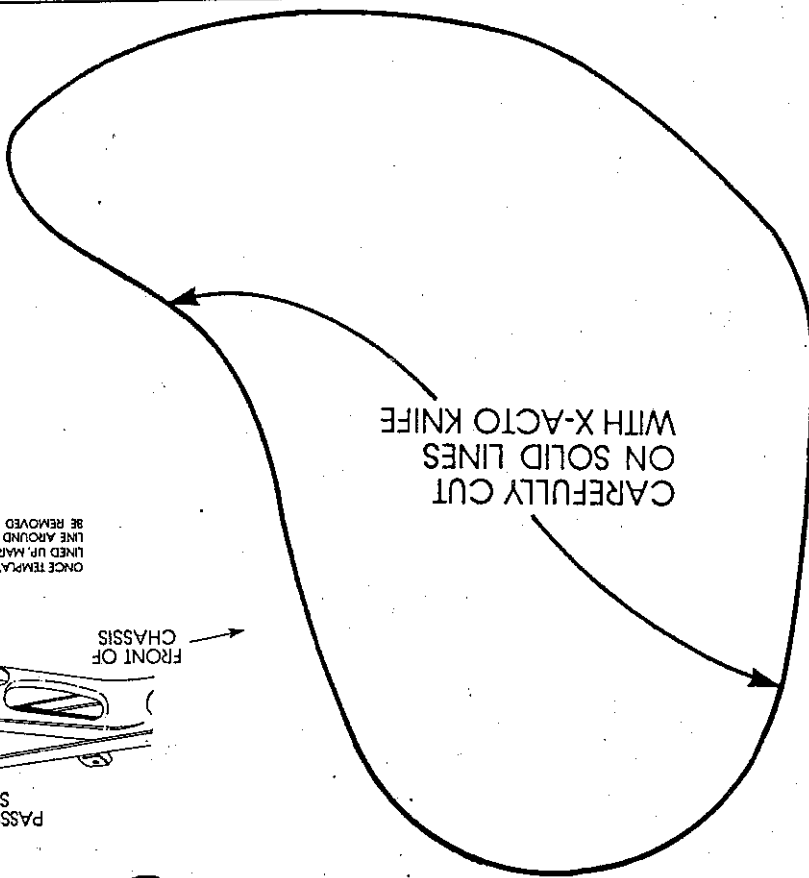

CUT ALONG LINE

CAREFULLY CUT
ON SOLID LINES
WITH X-ACTO KNIFE

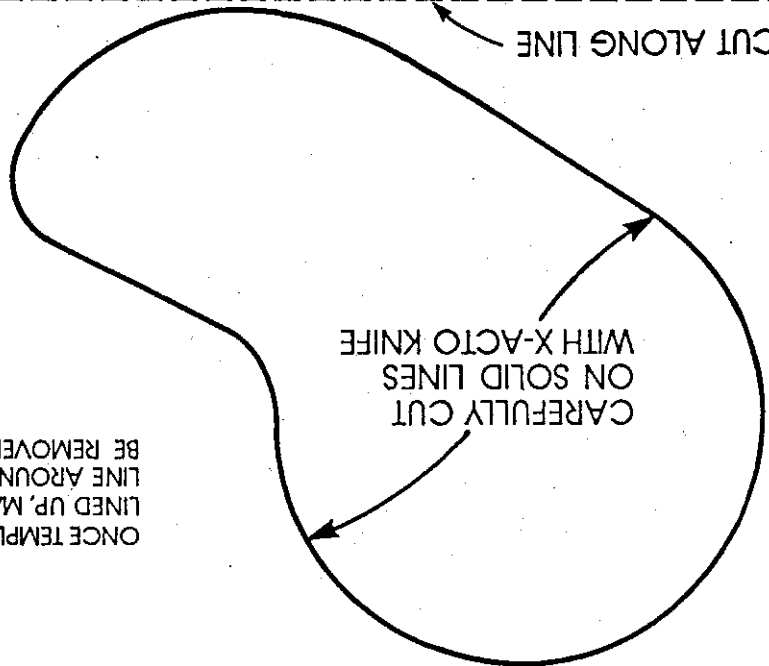

ALIGN THIS HOLE
WITH LOWER LEFT
MASTER CYLINDER
BRACKET HOLE
(FIG. A)

ONCE TEMPLATE IS
LINED UP, MARK A
LINE AROUND AREAS TO
BE REMOVED

TRANSMISSION PAN
CLEARANCE TEMPLATE

'42-'48 FORD

