


INSTRUCTIONS FOR #6009-#6010PB  
**'42-'48 FORD**

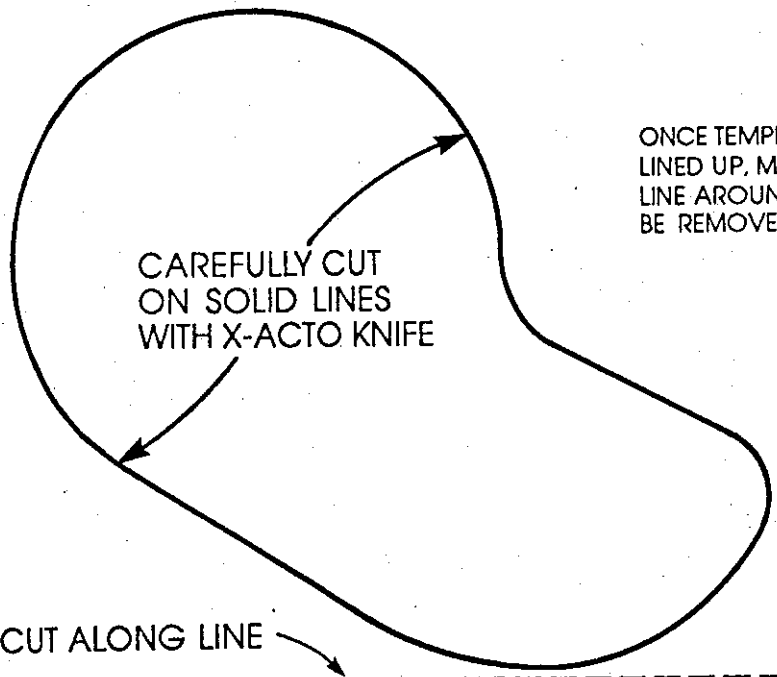


ONCE TEMPLATE IS LINED UP, MARK A LINE AROUND AREAS TO BE REMOVED

ALIGN THIS HOLE WITH LOWER LEFT MASTER CYLINDER BRACKET HOLE (FIG. A)



ALIGN WITH BOTTOM EDGE OF FRAME RAIL

*\*MAY NEED TO NOTCH CROSS BRACE*

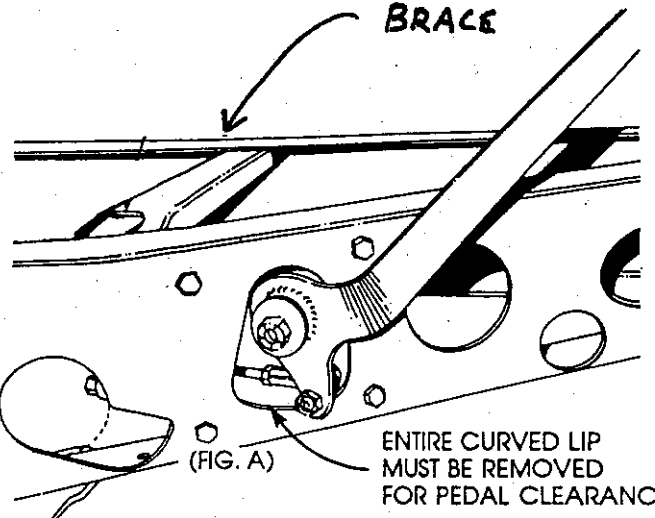

(DOTTED LINE SHOWS ORIGINAL FRAME HOLE)

