

PETE JAKES

and
•HOT ROD PARTS•

401 Legend Lane • Peculiar, MO 64078


Tech Line (816) 758-4504

800-334-7240 Fax (816) 758-4512

#8099

9" FORD HOUSING COVER INSTALLATION INSTRUCTIONS


1

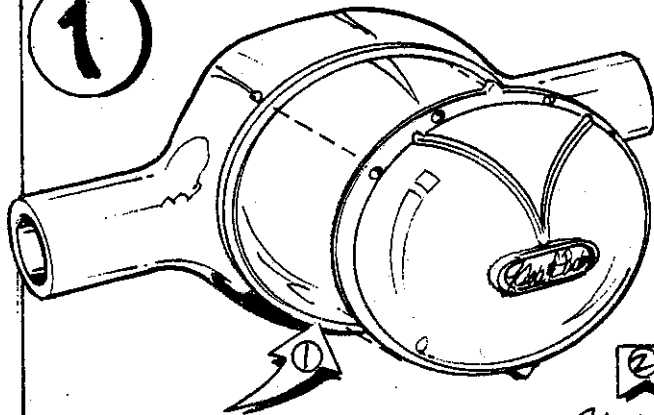

GRIND AWAY ANY WELDS OR ROUGH SPOTS TO ENSURE A FLAT FIT...
CLEAN CONTACT AREA THOROUGHLY!


PLACE THE COVER ON THE HOUSING, COVER SHOULD SET FLUSH!

2

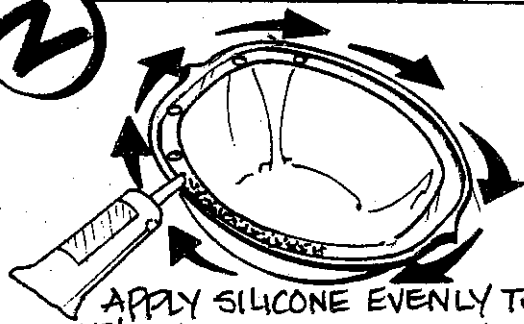


APPLY SILICONE EVENLY TO THE LIP OF COVER AS SHOWN!

3

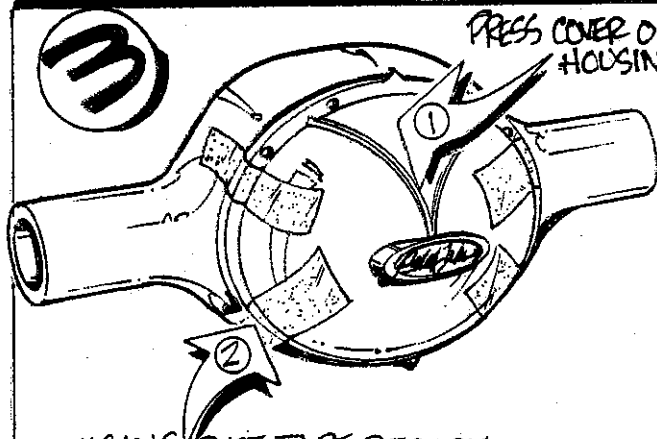


USING DUCT TAPE SECURE COVER TO HOUSING... ALLOW THE SILICONE TO SET-UP 2-4 HOURS.

4

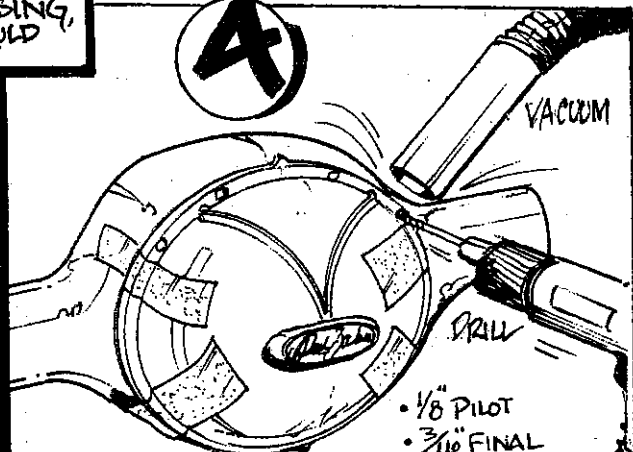

•USING AN 1/8" BIT, DRILL PILOTS THRU THE LIP OF THE HOUSING. USE THE PRE-DRILLED HOLES IN THE COVER AS A GUIDE. WHILE DRILLING, HOLD A VACUUM NOZZLE AT THE HOLE BEING DRILLED TO PICKUP ANY SHAVINGS FROM DRILLING... FOR YOUR FINAL DRILL, USE A 3/16" BIT

5

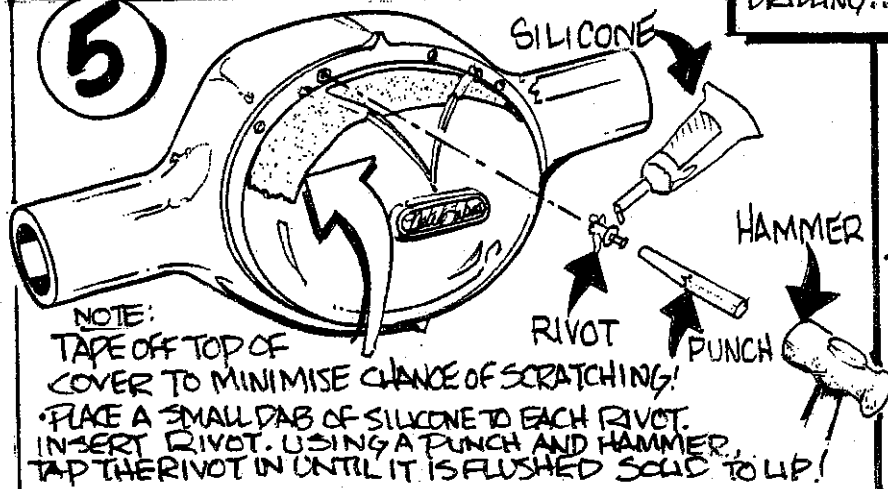

NOTE:
TAP OFF TOP OF COVER TO MINIMISE CHANCE OF SCRATCHING!
•PLACE A SMALL DAB OF SILICONE TO EACH RIVOT.
INSERT RIVOT. USING A PUNCH AND HAMMER, TAP THE RIVOT IN UNTIL IT IS FLUSHED SOLID TO LIP!

NOTE:

• FOLLOW THESE INSTRUCTIONS FOR A SIMPLE INSTALLATION OF THIS PRODUCT!

TECH LINE

810-758-4504